


How to upgrade using USB on BFX-AT100 STB

2022년 2월 25일 금요일 오후 8:52

< How to upgrade >

- Prepare the usb stick. (32 Gbytes and below, FAT file system)
- Unzip the attached FW and copy it to the root folder of the usb stick (usb_bfx-at100).

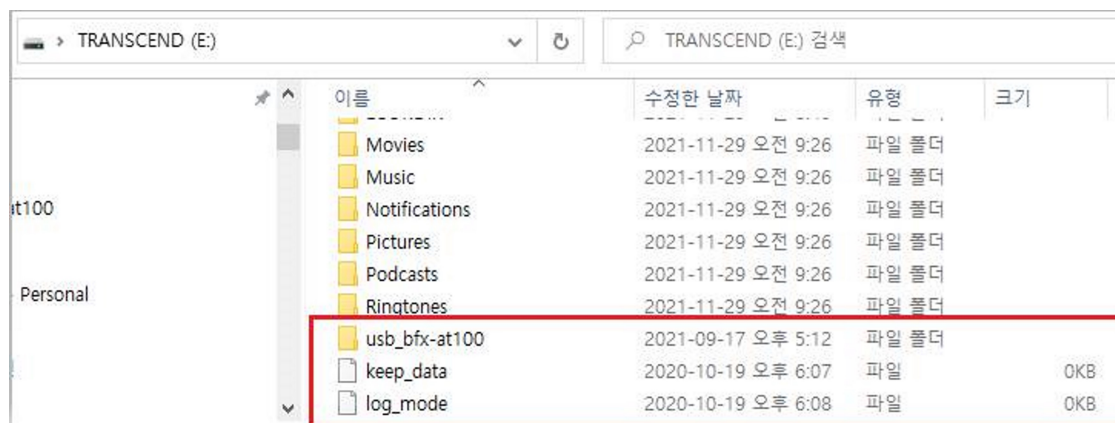


Then, as shown above, usb_bfx-at100 will be located in the root folder

And create keep_data and log_mode files with file names and place them in the root folder of usb_stick.

(These two files have a file size of 0kb, and STB only checks the existence of files.)

- After confirming that the above 3 files are on the USB stick, connect the the USB stick to the USB port on the back of the STB.
- And press the STB channel up/down button at the same time as shown in the picture below.

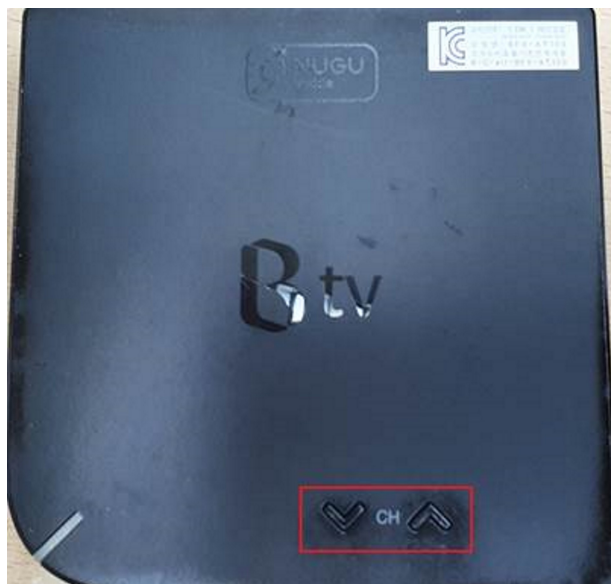

- Then, connect the power supply of the STB. (Power reset)

The STB will then enter upgrade mode after a while (while still pressing).

You can also release it from the STB channel up/down button after entering the upgrade mode.

The upgrade proceeds automatically and reboots when completed.