

Swan soundbar

Add ferrite core for speaker cables




ALT Co., Ltd.

Issued Date 2021.09.01

Ver.1.0


Issued by SH, SON

- ALT will provide the ferrite core for pre-MP
 - how to standard work at the factory
 - don't care with assemble the ferrite core at FA line or sub-line.
 - FA line stand work guide
 1. Assemble until the speaker cables as per the FII SOP.
 2. Assemble the ferrite core with reference to the drawing location.
 3. Attach the EVA sponge. It can be use below part
 - 484.00483.005 SPONGE 55*15*1mm REV.00 GP EVA
 - or
 - 484.00429.005 Gasket A

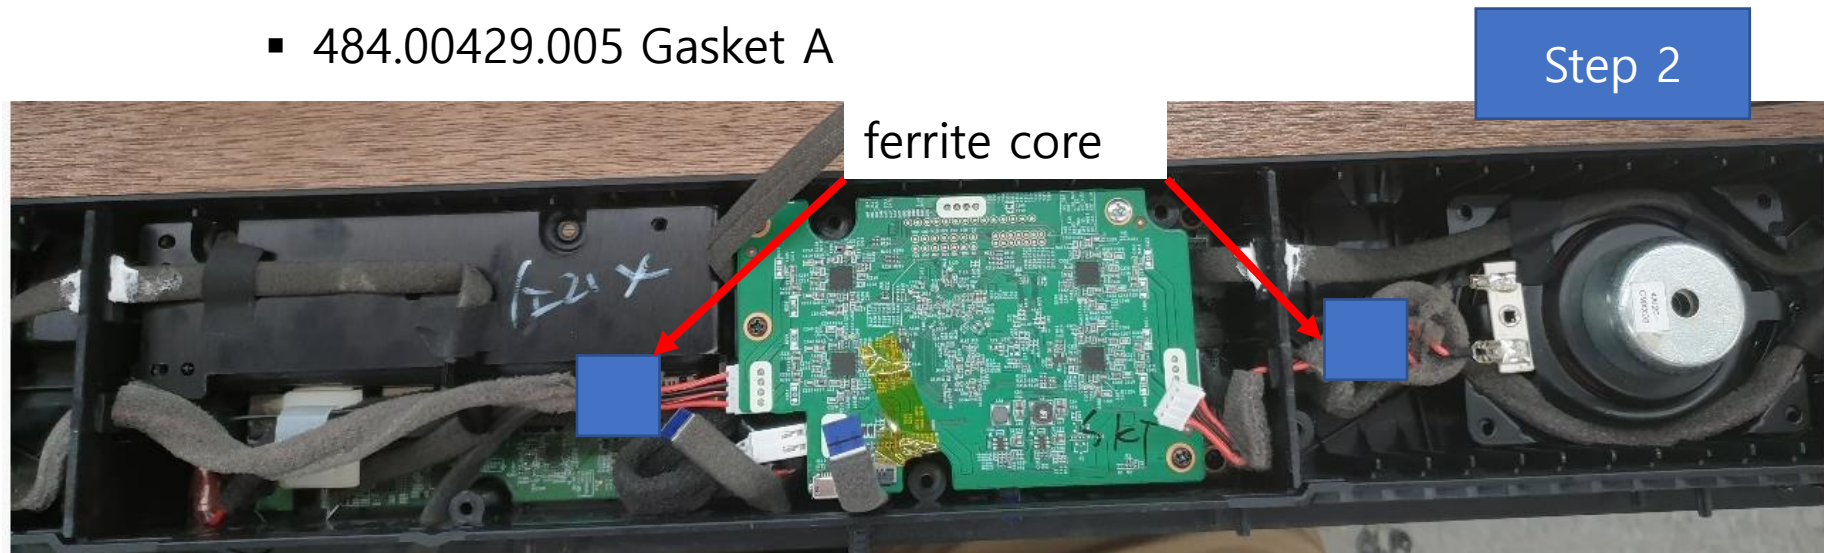

Step 3




Left channel

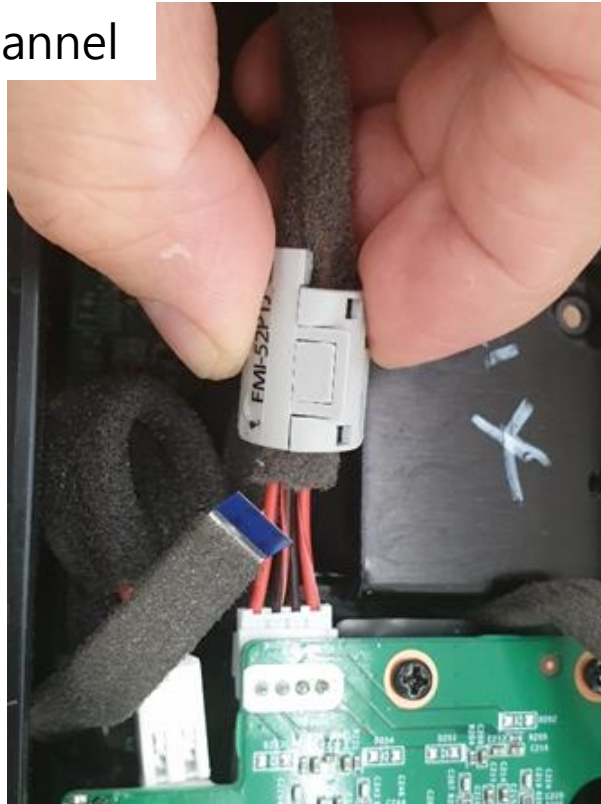

Right channel




Step 3

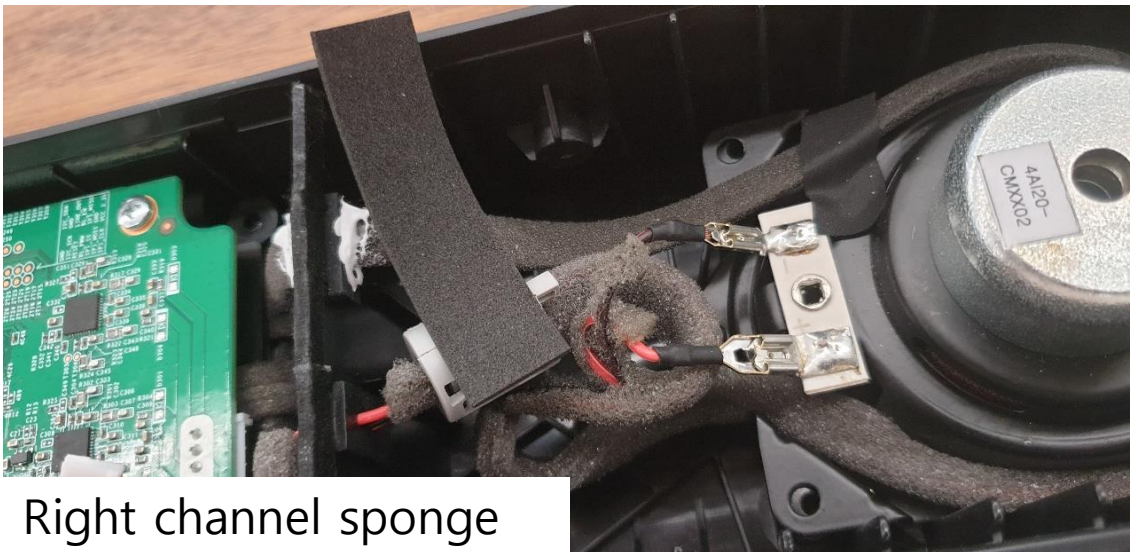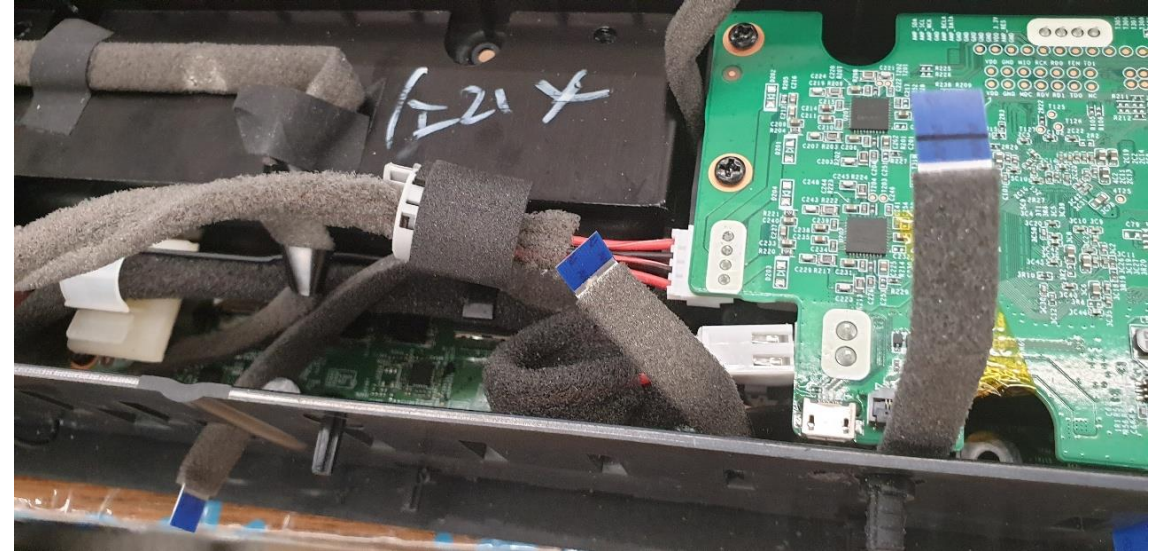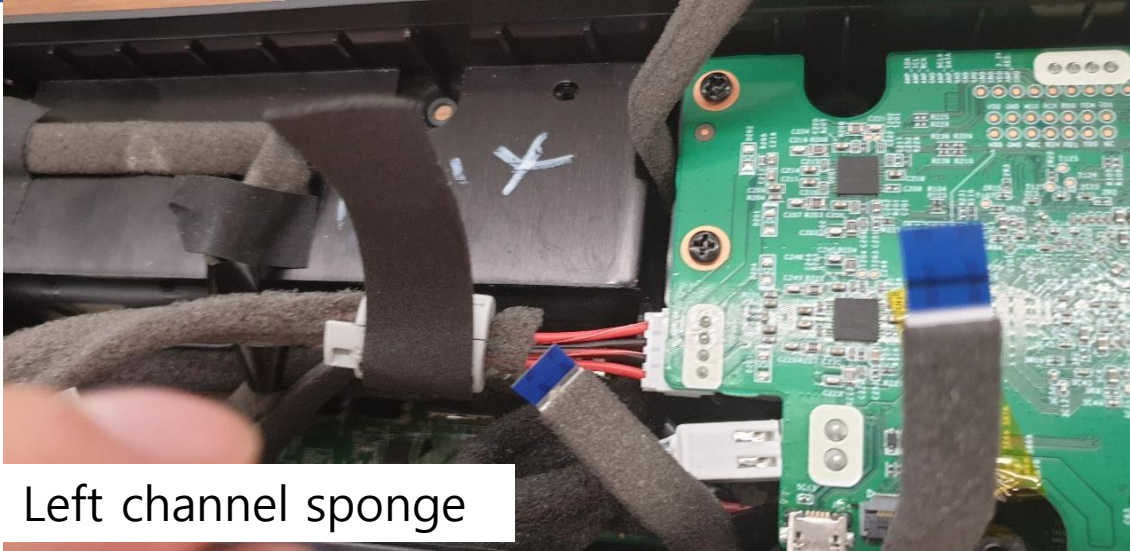




210825_SPEC_4AI20-CMXX04_REV03

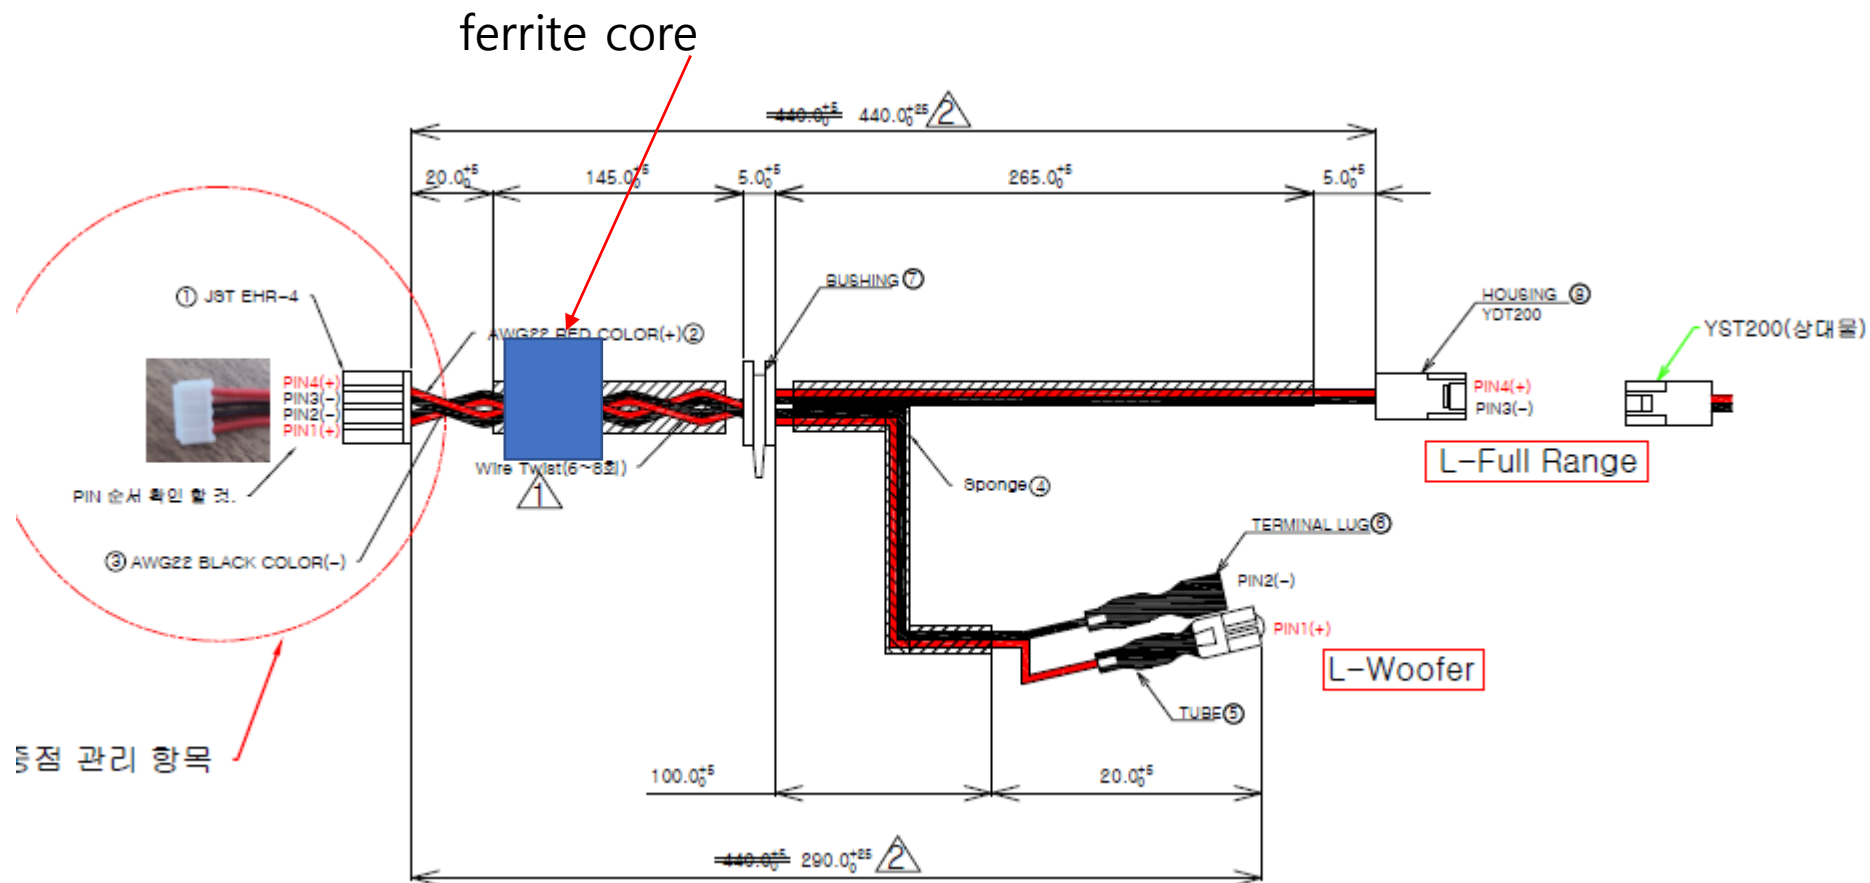

Rework drawings



210825_SPEC_4AI20-CMXX05_REV02

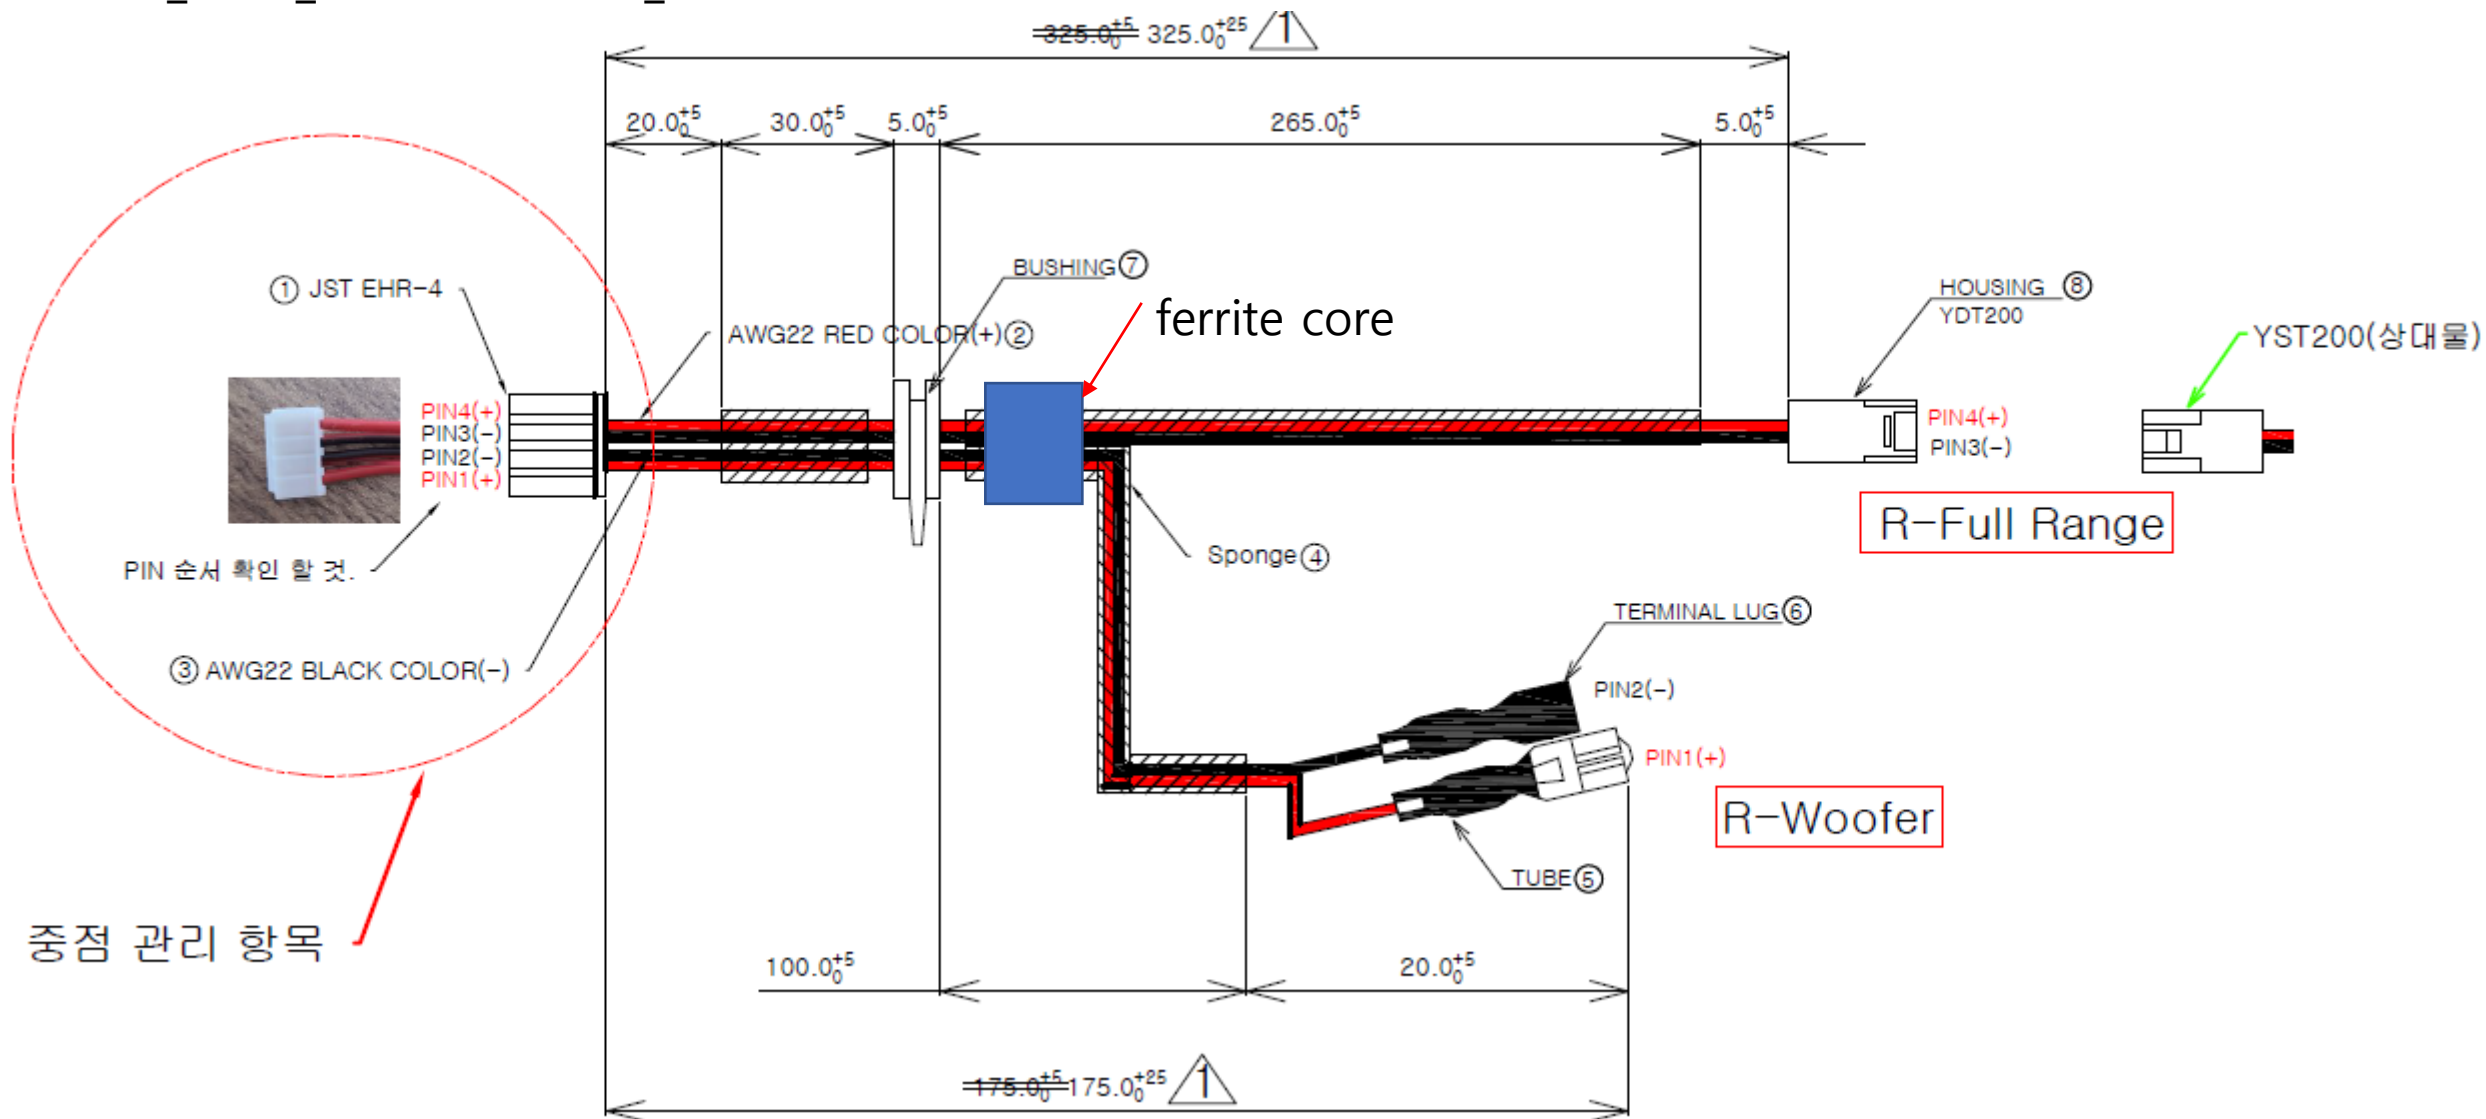

- End of Documents